

WM Belt Clips

WMBCSL



Spring-Loaded Metal

- Machined Aluminum Bracket
- Machined Aluminum Spring-Loaded Clip

The spring-loaded machined aluminum clip has the same type of attachment collar as the wire clip, and installs in the very same manner, but provides better retention than the wire clip.

WMBCWIRE



Stainless Steel Wire

- Machined Aluminum Bracket
- Stainless Steel Spring Clip

The spring wire belt clip allows the transmitter to be worn on a belt or other wardrobe item where a low profile is required.

Installation Instructions



Detents

The housing on dual battery models is symmetrical, so the bracket can be positioned on either the top or bottom of the transmitter to orient the antenna accordingly.

Detents are provided in the back cover to align with the set screws in the belt clip.

Hardware for WM transmitter models



P/N 28832 set screw

P/N 26862 thumb screw

P/N 35856 1/16 in. (.0625 in.) hex key (allen wrench)





Thumbscrews

Align the bracket so the set screw seats into the detent and tighten it with the hex key. Do not overtighten the set screw.

The belt clip can be installed so you have the antenna up or the antenna down. The WM belt clip, however, will only slide on to the transmitter on the top side where the antenna is mounted. Belt clip **will not** fit over battery doors



Set Screws

Each belt clip comes with a set of thumbscrews and a set of set screws for you to mount per your preference. Hex keys (Allen Wrenches) are also included for set screw installations

