




If your *Walkie Woogie* doesn't fit your surveillance headset, follow these simple instructions:

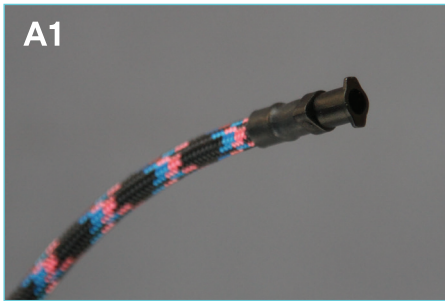


A1 Locate the twist connector.

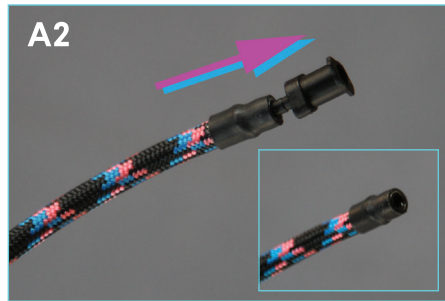


A2 Carefully pull the twist connector straight out of the *Walkie Woogie*.

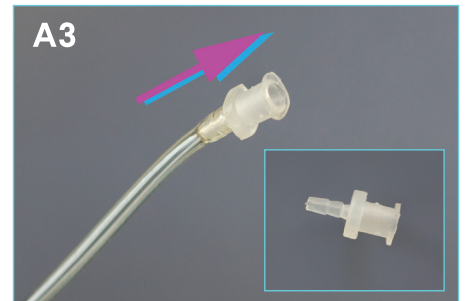

A3 Locate your original coil that fits your surveillance headset. Pull the twist connector out.

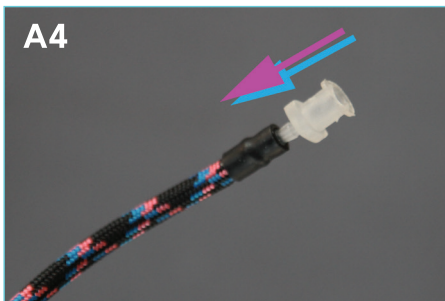

A4 Insert the original twist connector into your *Walkie Woogie*.

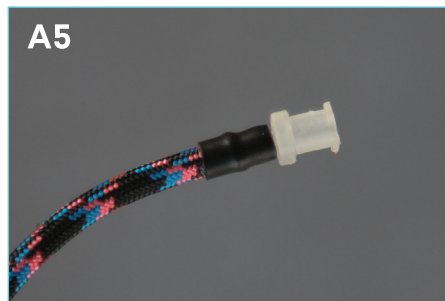

A5 Your *Walkie Woogie* is now ready for your surveillance headset!


How to connect your *Walkie Woogie*:




B1 Remove your original coil from your surveillance headset and locate the acoustic tube adapter.




B2 Line up the twist connector with the acoustic tube adapter.

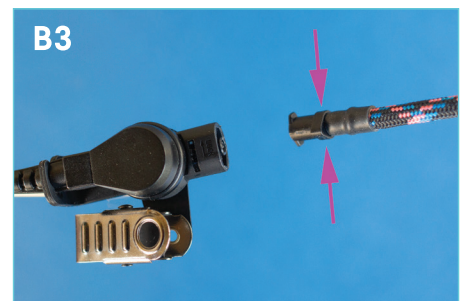


B3 Hold the *Walkie Woogie* from the collar of the plastic twist connector.

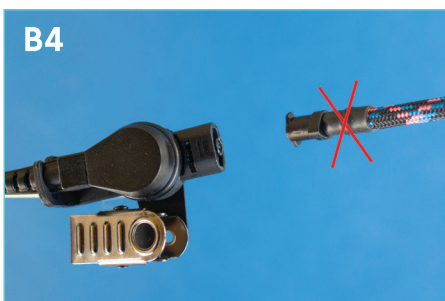

B4 Do NOT hold above the twist connector's collar. This will increase the chances of snapping the connector.

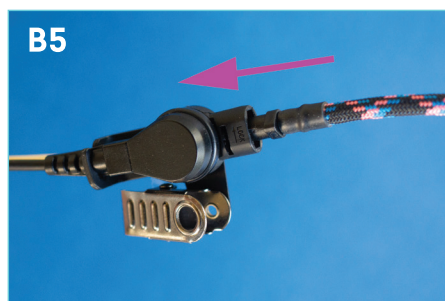

B5 Insert the twist connector.

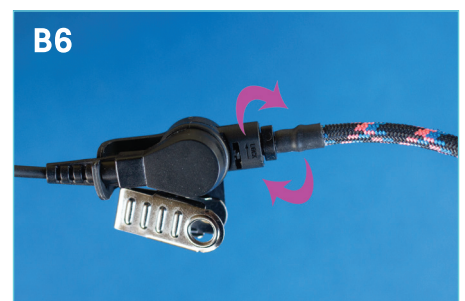

B6 Twist to lock.